

FILARE

GET TO KNOW FILARE



USING FILARE

1. Always wash Filare before and after each use.
2. We recommend using water-based lube with all Lora DiCarlo toys.
3. Turn on Filare using the power button, then press the D+ button on the bottom.
4. The mode button (E) controls the direction of the movement and how far the stimulation points press out of the silicone. Explore to find what you like.
5. Press the power button to turn Filare off, wash and store in the provided cloth bag.



CHARGING FILARE

Charge Filare for atleast 1 hour before the first use by placing the magnetic USB charging cable over the two metal dots on the back of the device and connecting to a sage power source. Once plugged in Filare will display the charging status by gradually lighting the circle around the power button. When the circle is fully lit with a solid white light, your device is fully charged.

Note: Do not charge while in water or while the product is wet.

Always make sure the USB charging cable and charging points on the device are completely dry before charging. Use only the official Lora DiCarlo charging cable to ensure safe and effective charging.



25% charged



50% charged



75% charged



100% charged

LOW POWER WARNING: The circle light will begin to flutter when there are 5 minutes of use time remaining.

AUTO-SHUTOFF: If the G-spot stimulator or clitoral stimulator are not activated within 5 minutes, Filare will turn off automatically to conserve power.

TIPS AND TRICKS

PRODUCT LOCK: To ensure Filare doesn't turn on at the wrong time, such as during travel, you can disable and lock all of the buttons. Simultaneously press and hold the power button and the decrease intensity button (D-), the LED will flutter rapidly to signify lock. Repeat this combination to unlock the device and the LED will flutter again.

CLEANING, STORAGE, AND SAFETY: Always clean Filare with mild soap and water or a purpose-made, silicone-safe cleanser before and after each use. Filare is waterproof up to 1 meter/3 feet so you can use it in the bath or shower and run it under the faucet or fully submerge it for thorough cleaning. Wipe dry with a clean lint-free cloth and store in a cool, dry location.

Use only water-based lubricants and personal moisturizers, as oil or silicone-based formulas can damage the materials and reduce the lifespan of your device. Note: Do not boil, microwave, or run Filare through a dishwasher or sterilizer, as extreme heat and harsh detergents can damage the product. Do not use silicone, alcohol, acetone, petroleum, acidic, or alkaline-based products on Filare as it can damage the product materials.