 


# OSÉ 2

## OSÉ 2 ANATOMY

To understand how Osé 2 will feel before you use it, turn it on to explore the buttons and feel both stimulators on your hand. This will help you understand where and how you want to use it on your body.

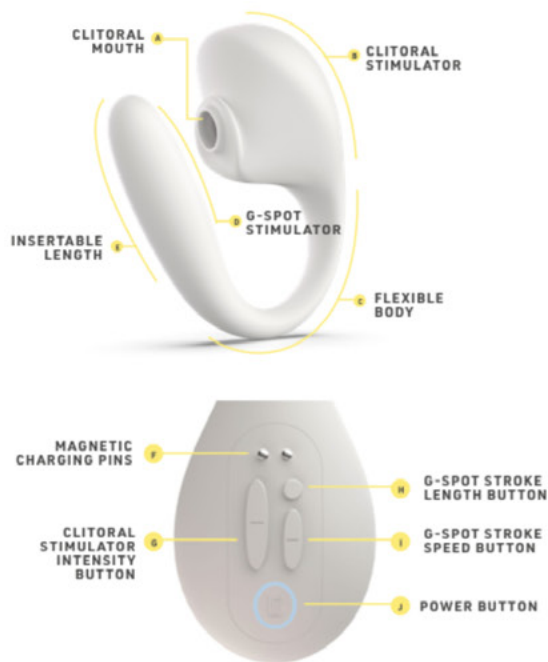

## FIRST STEPS

**Get to know your body first** - warm up and explore by using the clitoral stimulator by itself at different angles over the clitoris and vulva. Many people enjoy placing the clitoral mouth directly over/arond the glans clitoris, but try different positions to find what you like. Arousal can help you find and stimulate your G-spot easier, and also makes insertion easier.

**Get to know Osé 2** - before use, explore the buttons so you know how each setting feels before inserting the G-spot stimulator.

**DO NOT INSERT OR REMOVE Osé 2 WHILE IT IS POWERED ON.**


## FINDING YOUR PERSONAL FIT

### STEP 1: FIND YOUR G-SPOT WITH Osé 2

Use your fingers to explore and find your G-spot. Then with the product turned off, bend Osé 2 slightly and use lubricant to insert the G-spot stimulator. Turn on, and explore the settings to align the finger/come-hither motion with your G-spot.

**Maximum Insertable Length** - depending on your G-spot location, Osé 2 may not need to be

inserted very far in. Just make sure that the moving stimulation "finger" is completely past your vaginal entrance.

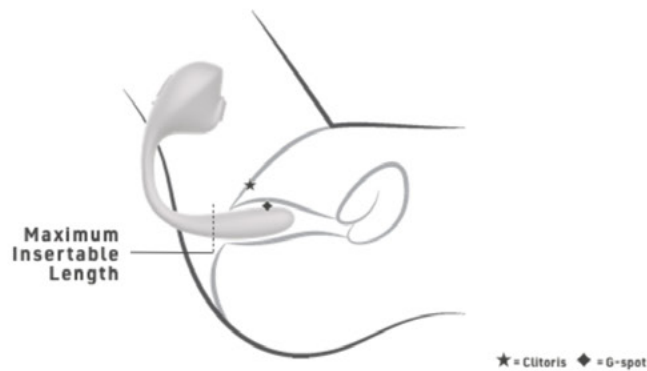

## STEP 2: FIND YOUR G-SPOT BEND

Notice how much further you need to bend Osé 2 for the clitoral stimulator to reach your clitoris. You can continue to make slight adjustments to this bend so that the clitoral stimulator and the G-spot stimulator both touch their pleasure points at the same time.

1. Turn off and remove the product. 2. Straighten the flexible body. 3. Bend again, slightly further up or down the body so the two stimulators will reach each pleasure point.

This bend can help control how much of the product is inserted into your vagina and keep it in contact with your G-spot.



## STEP 3: FIND YOUR CLITORAL BEND


The clitoral stimulator is extremely flexible and can bend side to side and front to back. Note the angle needed to make the clitoral stimulator press flat against your vulva, making sure the glans clitoris is inside the clitoral mouth. Bend the clitoral stimulator sharply where it connects to the flexible body, this may create a crimp or wrinkle in the silicone, which is completely normal. Turn off and remove Osé 2 to make macro adjustments until the clitoral mouth touches your clitoris at the angle you like. It should create a light seal with the body and feel like a mild suction.



## STEP 4: FINE TUNE

It may take some small adjustments to find just the right position. Turn off and remove. Then using your palm squeeze or crimp the flexible body together to bring the clitoral stimulator and G-spot stimulator closer together to increase contact and pressure on each pleasure point. This also helps Osé 2 "hug" the body and become more hands-free.

1. Wrap your hand around the flexible body. 2. Squeeze or crimp the flexible body together with the palm of your hand to press the clitoral stimulator and the G-spot stimulator together.

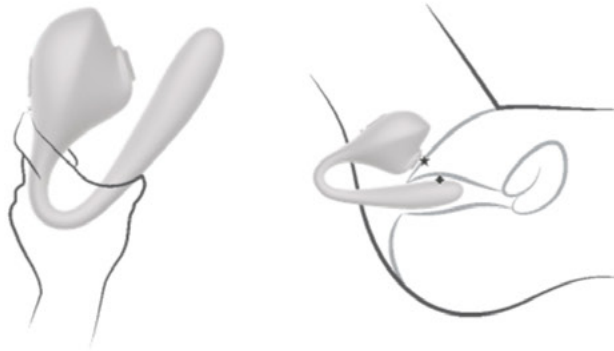

## CHARGING OSÉ 2

**PRODUCT LOCK:** To ensure Osé 2 doesn't turn on at the wrong time, such as during travel, you can disable and lock all of the buttons. Simultaneously press and hold the power button and then G-Stroke length button (H), the LED will flutter rapidly to signify lock. Repeat this combination to unlock the device and the LED will flutter again.

**CLEANING, STORAGE, AND SAFETY:** Always clean Osé 2 with mild soap and water or a purpose-made, silicone-safe cleanser before and after each use. Osé 2 is waterproof up to 1 meter/3 feet so you can use it in the bath or shower and run it under the faucet or fully submerge it for thorough cleaning. Wipe dry with a clean lint-free cloth and store in a cool, dry location. Use only water-based lubricants and personal moisturizers, as oil or silicone-based formulas can damage the materials and reduce the lifespan of your device.


**Note: Do not boil, microwave, or run Osé 2 through a dishwasher or sterilizer, as extreme heat and harsh detergents can damage the product.** Do not use silicone, alcohol, acetone, petroleum, acidic, or alkaline-based products on Osé 2 as it can damage the product materials.



25% charged



50% charged

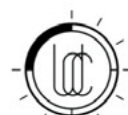

75% charged



100% charged

**LOW POWER WARNING:** The circle light will begin to flutter when there are 5 minutes of use time remaining.

**AUTO-SHUTOFF:** If the G-spot stimulator or clitoral stimulator are not activated within 5 minutes, Osé 2 will turn off automatically to conserve power.

## TIPS AND TRICKS

**PRODUCT LOCK:** To ensure Osé 2 doesn't turn on at the wrong time, such as during travel, you can disable and lock all of the buttons. Simultaneously press and hold the power button and then G-Stroke length button (H), the LED will flutter rapidly to signify lock. Repeat this combination to unlock the device and the LED will flutter again.

**CLEANING, STORAGE, AND SAFETY:** Always clean Osé 2 with mild soap and water or a

purpose-made, silicone-safe cleanser before and after each use. Osé 2 is waterproof up to 1 meter/3 feet so you can use it in the bath or shower and run it under the faucet or fully submerge it for thorough cleaning. Wipe dry with a clean lint-free cloth and store in a cool, dry location. Use only water-based lubricants and personal moisturizers, as oil or silicone-based formulas can damage the materials and reduce the lifespan of your device.

Note: Do not boil, microwave, or run Ose 2 through a dishwasher or sterilizer, as extreme heat and harsh detergents can damage the product. Do not use silicone, alcohol, acetone, petroleum, acidic, or alkaline-based products on Ose 2 as it can damage the product materials.