

 
CLUB VIBE® 3.OH

OhMiBod is committed to bringing you high quality technology enabled pleasure products and accessories. Before you begin enjoying Club Vibe 3.OH, please take a moment to review this manual.

## CLUB VIBE 3.OH - WHAT'S IN THE BOX


---

### WIRELESS WEARABLE MASSAGER\*

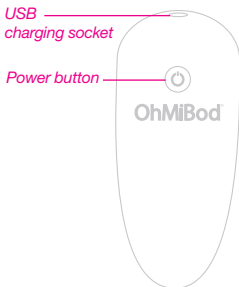

*\*For external use only*

### WIRELESS REMOTE CONTROL

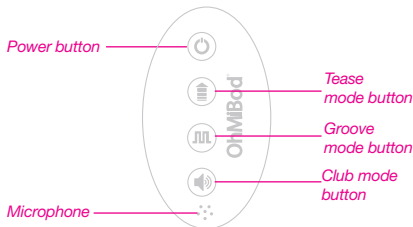 

---

• Black lace thong (OS-one size)

• USB charging cable

• Privacy pouch


## USING CLUB VIBE 3.OH

---

### TURNING ON MASSAGER

1. Press and hold  for 3 seconds to turn on. One short pulse will occur upon power on.

**NOTE:** *Blinking power button indicates vibe is ready to use.*

2. Press and hold  for 3 seconds to turn off. Three short pulses will occur upon power off.



**NOTE:** *Vibe will turn off automatically after approximately 20 minutes of inactivity.*





## USING CLUB VIBE 3.OH

---

### OPERATING WIRELESS REMOTE CONTROL

Press and hold  for 3 seconds to turn on.  
Once on, press and hold  for 3 seconds to turn off both the remote control and the massage.


### TEASE MODE

Press  button quickly to send short vibration burst.  
Press and hold  to send sustained vibrations.

**TIP:**  button can also be pressed to pause the massager when using Groove or Club modes.

---


### GROOVE MODE

Press  to activate mode.  
Press again to change to next pattern.

 
**NOTE:** 5 pre-programmed pulsations in all.

---

### CLUB MODE:

Press  to activate sound responsive vibration  
Press again to adjust the sensitivity to sound.

**NOTE:** 3 levels of sensitivity. Brightness of button LED indicates sensitivity level. Ex: The brighter the LED the more sensitive the built-in microphone will be to ambient sound.

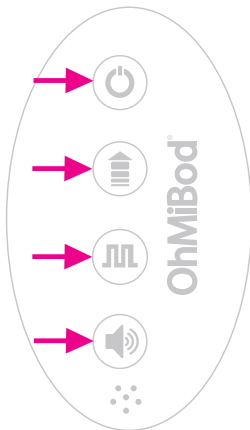

### SENSITIVITY

 


## CHARGING CLUB VIBE 3.OH & WIRELESS REMOTE CONTROL

---

Simply plug the USB charging cable provided with Club Vibe 3.OH into the USB port on your computer or USB wall charger adapter. Connect the other end of the cable into the charging socket on the end of Club Vibe 3.OH or wireless remote control (*see diagram*). The LED will blink indicating the device is charging. (Please be sure that the massager is completely dry before charging.)

**NOTE:** *Approximate time to reach full battery charge is 2 hours. LED will glow steady when fully charged.*

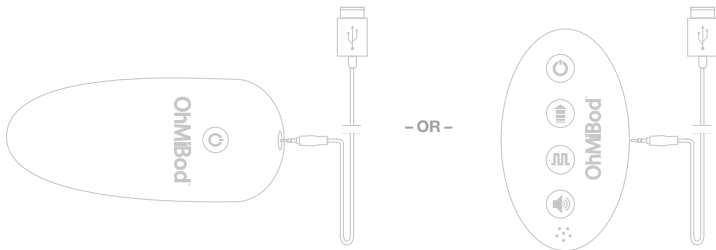

## ADDITIONAL CHARGING SAFEGUARDS

---

- Please be sure that the massager is completely dry before charging.
- Only use the charging cable provided to charge the devices.
- Do not use USB charging hubs to charge the devices.
- Only use with UL certified USB wall chargers.

## **TROUBLESHOOTING**

---

If the LED does not blink when the product is connected to the USB cable, check to make sure the USB cable is properly connected to the USB port and Club Vibe 3.OH or wireless remote control.

## **BATTERY DISPOSAL**

---

- Club Vibe 3.OH and its remote control contain a rechargeable battery. Please do not dispose of this product with normal household waste.
- Please dispose of this product at the appropriate electrical and electronic equipment recycling/disposal locations in accordance with government regulations.
- The recycling of this product appropriately will help to protect our environment.

## **CARE & CLEANING**

---

- Club Vibe 3.OH is splash proof only. When cleaning, avoid submerging in water and getting any water into the charging socket.
- Clean after every use with mild soap and water. Dry thoroughly.
- Store in privacy pouch to keep Club Vibe 3.OH clean and safe until next use.

## **IMPORTANT SAFEGUARDS**

---

- For external use only. Massager is not to be inserted into the body.
- Do not use on areas that are swollen, inflamed or have skin lacerations.
- Stop using the massager if you experience pain or discomfort.
- Do not submerge in water.
- Do not use while bathing or in the shower.

## SPECIFICATIONS

---

### Club Vibe 3.OH:

**Materials:** Body-safe silicone and ABS

**Size (Vibe):** 3" length, 1 3/8" width, 0.5" depth  
(76 mm length, 35 mm width, 14mm depth)

**Weight:** 1.0 oz. (29g)

**Battery:** Lithium-ion, 3.7V with 160mAH

**Charging:** 1.5-2 hours

**User time:** up to 2 hours of use

**Wireless Remote Control:** 2.4GHz



## WARRANTY

---

OhMiBod warrants this product for a period of one (1) year from the date of original purchase, against defects due to faulty workmanship or materials. In the event that this product fails during the warranty period, simply email us at [customercare@ohmibod.com](mailto:customercare@ohmibod.com) and provide us with a valid proof of the date of original purchase and we will replace the faulty product at no extra charge.

This warranty does not cover cosmetic deterioration caused by normal wear and tear or damage caused by accident, misuse, neglect or other use not in accordance with this instruction manual. Any attempt to open or take apart this product or its accessories will void the warranty.

## CONTACT US

---

If you have any questions regarding your new product, please check out additional information at [www.ohmibod.com/customercare](http://www.ohmibod.com/customercare). You can also reach us via email at [customercare@ohmibod.com](mailto:customercare@ohmibod.com).

*No medical claims are warranted or implied by the use of this product.  
Sold as an adult novelty.*





## **Special Note from Founder**

“OhMiBod’s goal is to reflect the collective personality of our customers who have an open, honest attitude toward sexuality and personal pleasure. My hope is that OhMiBod becomes a symbol of liberation, reflecting new and progressive attitudes toward personal pleasure for the young and the young at heart...People who are comfortable with their bodies, know what feels good and who, not only aren’t afraid to admit it, are empowered to go after it.”

## Federal Communications Commission (FCC) Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: A. This device may not cause harmful interference, and B. This device must accept any interference received, including interference that may cause undesired operation.
  2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- 

This equipment has been tested. And it found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and uses and radiates radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio /TV technician for help

**WARNING:** A shielded-type power cord is required in order to meet FCC emission limits and also to prevent interference to nearby radio and television reception. It is essential that only the supplied power cord be used.

OhMiBod<sup>®</sup>

Copyright© Suki, LLC 2016. All rights reserved.  
Designed in the United States / assembled in PRC



**RoHS**

